

Specifications

Amp	CM15B
Input Voltage	220-240V 50/60Hz
Input Impedance	1 MΩ
Power Requirement	28W
Power amp Output	15W
Tone Controls	Bass / Middle / Treble
Speaker	8" 4 ohm 15W
Dimension	Height: 31.5cm Width: 32.5cm Depth: 20cm
Weight	5.5kg

Cort[®]

BASS AMPLIFIER



CM15B

Owner's Manual

Cort[®]

www.cortguitars.com

FEATURES AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE



Intended to alert the user to the presence of uninsulated "dangerous voltage" with in the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



Intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

CAUTION : Risk of electrical shock - DO NOT OPEN !

CAUTION : To reduce the risk of electrical shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.


WARNING : To prevent electrical shock or fire hazard, do not expose this unit to rain or moisture. Before using this unit, please read the operating instructions for further warnings.

Important Safety Instructions

WARNING : When using electrical products, basic cautions should always be followed, including the following.

- Read, Keep and follow all instructions.
- Heed all warnings.
- To prevent damage, fire or shock hazard, do not expose this unit to rain or moisture.
- This product should be located away from heat source such as radiators, heat registers, or other products that produce heat.
- Do not block any of the ventilation openings. Install in accordance with manufacturer's instructions.
- Only connect the power supply cord to an earth grounded AC receptacle in accordance with the voltage and frequency ratings listed under INPUT POWER on the rear panel of this unit.
- Protect the power supply cord from being pinched or abraded.
- The power supply cord should be unplugged when left unused for long periods of time, or during electrical storms.
- Do not drip nor splash liquids, nor place liquid filled containers on the unit.
- Clean only with dry cloth.
- Very high sound pressure levels may cause temporary or permanent hearing damage. Use care when setting and adjusting volume levels during use.
- Some types of Radio Frequency Interference (RFI) or Electromagnetic interference (EMI) may affect operation of the amplifier. Sources of RFI and EMI may include; Cellular telephones, radios, transceivers, televisions, and some computer equipment. Should a difference in speaker output be noticed under these conditions, try physically moving the amplifier away from the interference source or connect the amplifier to a different-grounded power circuit.
- Install the product where the plug can be easily controlled.

Front Panel Features

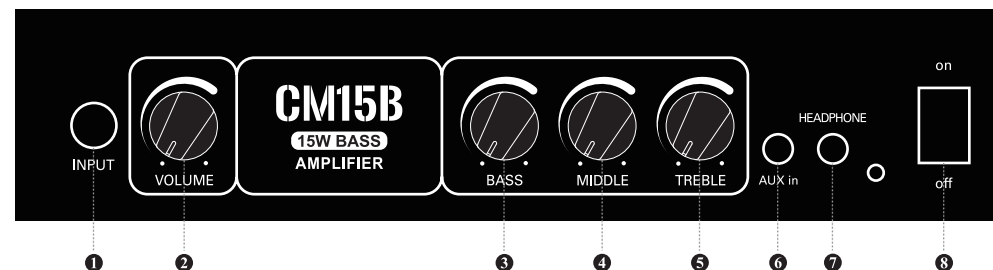

1 INPUT

Plug your guitar in here with a good quality guitar cable.

2 Volume

Adjust the overall output of the amplifier. When turning the amplifier on, make sure this control is turned all the way down to zero.

3 Bass

Adjust the low-frequency level. (bass or bottom end present in your sound)

4 Middle

Adjust the middle-frequency level. (mid present in your sound)

5 Treble

Adjust the high-frequency level. (treble or top end present in your sound)

6 Aux in

Connect your CD/MP3 player in here and play along.

7 Headphone

Plug headphone jack in here.

8 Power

Main power switch for the unit. The LED will be lit when the unit is ON and will not be lit when the unit is switched off.