

Specifications

Amp	CM15G
Input Voltage	~100V,~110V,~120V,~220V,~230V,~240V 50/60Hz Factory Option
Input Impedance	33 KΩ
Power Requirements	20 W
Power Output	15W
Rated Load Impedance	8 Ω
Speaker	Custom 6.5" Speaker
Dimension	Height: 31.3cm
	Width: 32.0cm
	Depth: 19.5cm
Unit Weight	5.2kg

Cort®

cortguitars.com



Suggested Settings

Clean

Blues / Crunch

Rock Lead

Extreme Metal

cortguitars.com

CM15G

Owner's Manual

v21.0215



Intended to alert the user to the presence of uninsulated "dangerous voltage" with in the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



Intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

CAUTION : Risk of electrical shock - DO NOT OPEN !

CAUTION : To reduce the risk of electrical shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

WARNING : To prevent electrical shock or fire hazard, do not expose this unit to rain or moisture. Before using this unit, please read the operating instructions for further warnings.

Important Safety Instructions

WARNING : When using electrical products, basic cautions should always be followed, including the following.

- Read, keep and follow all instructions.
- Heed all warnings.
- To prevent damage, fire or shock hazard, do not expose this unit to rain or moisture.
- This product should be located away from heat source such as radiators, heat registers, or other products that produce heat.
- Do not block any of the ventilation openings. Install in accordance with manufacturer's instructions.
- Only connect the power supply cord to an earth grounded AC receptacle in accordance with the voltage and frequency ratings listed under INPUT POWER on the rear panel of this unit.
- Protect the power supply cord from being pinched or abraded.
- The power supply cord should be unplugged when left unused for long periods of time, or during electrical storms.
- Do not drip nor splash liquids, nor place liquid filled containers on the unit.
- Clean only with dry cloth.
- Cort amplifiers and ear/headphones (if equipped) are capable of producing very high sound pressure levels which may cause temporary or permanent hearing damage. Use care when setting and adjusting volume levels during use.
- Some types of Radio Frequency Interference (RFI) or Electromagnetic interference (EMI) may affect operation of the amplifier. Sources of RFI and EMI may include; Cellular telephones, radios, transceivers, televisions, and some computer equipment. Should a difference in speaker output be noticed under these conditions, try physically moving the amplifier away from the interference source or connect the amplifier to a different-grounded power circuit.

KEEP THESE INSTRUCTIONS !

❶ INPUT jack

Plug your guitar in here with a good quality (screened) guitar cable.

❷ CLEAN VOLUME control

Adjusts the output level of the Clean Channel when the CH Select Switch is 'out'.

❸ CHANNEL SELECT switch

Pressing the CH Select Switch will engage the Lead Channel.

❹ LEAD GAIN control

Adjusts the amount of distortion generated in the Lead Channel.

❺ LEAD VOLUME control

Adjusts the output level of the Lead Channel.

❻ TREBLE control

Adjusts the high-frequency level (treble or top end in your sound).

❼ MIDDLE control

Adjusts the middle-frequency level (mid present in your sound).

❽ BASS control

Adjusts the low-frequency level (bass or bottom end present in your sound).

❾ CD input

Connect your CD/MP3 player (1/8" mini plug connection) in here and play along.

❿ HEADPHONE jack

Plug headphone jack (1/8" mini plug connection) in here.

⓫ POWER switch & LED

Main power switch for the unit. The LED will be lit when the unit is ON and will not be lit when the unit is switched off.

Front Panel Features

